
NOTE: Wale can be in different angles but the same practice is used.

STEP 1

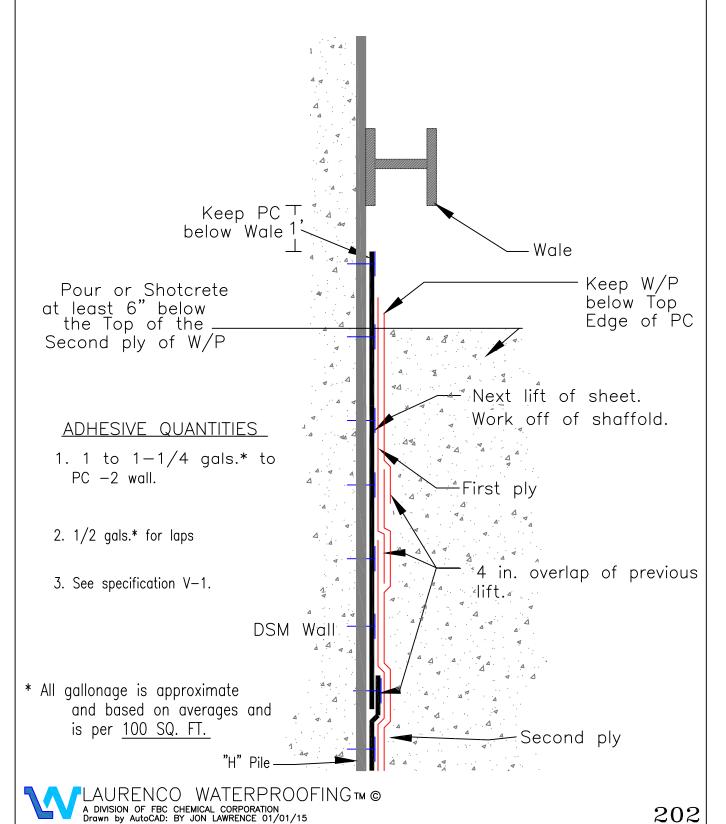

2 PLY WALL APPLICATION OVER MECHANICALLY ATTACHED PC-2