


**STEP #1** — APPLY POLYETHYLENE FILM, WATERPROOFING AND PROTECTION COURSE AS SHOWN.

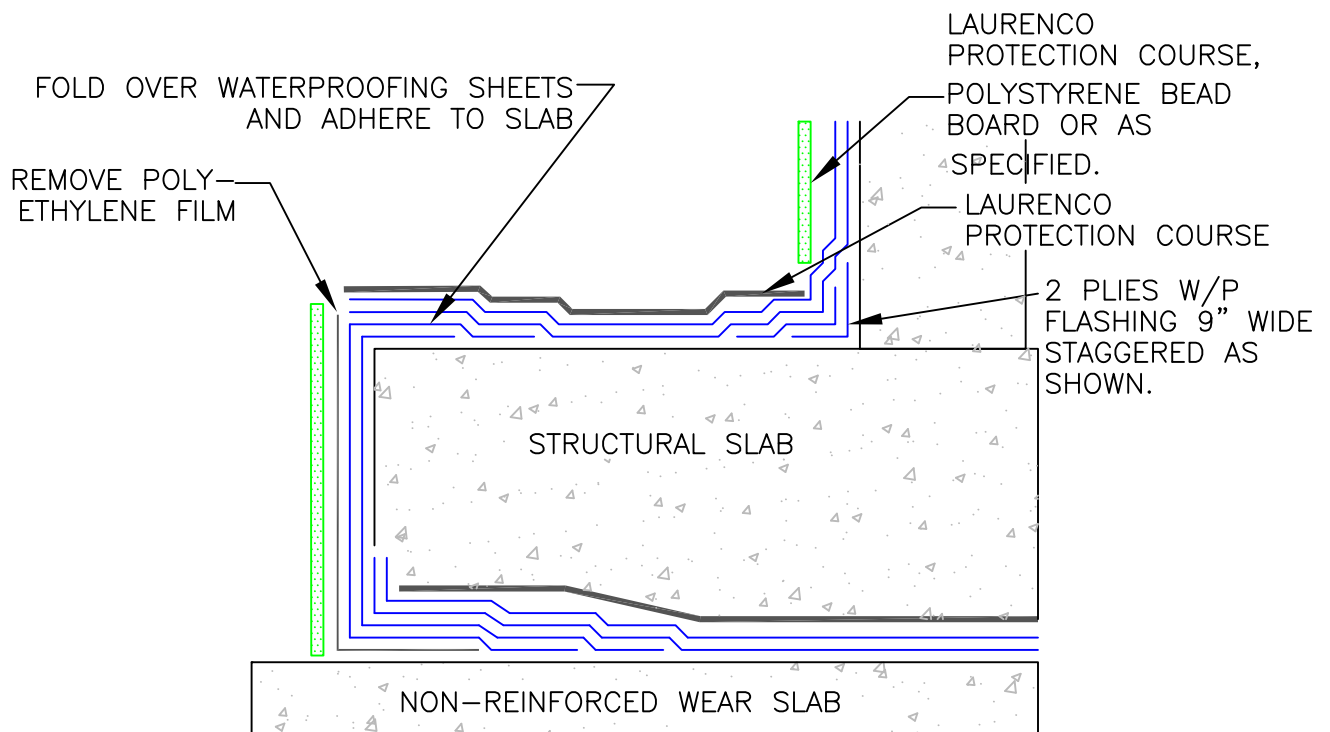

**STEP #2** — POUR SLAB INTO PLACE. FOLD OVER WATERPROOFING SHEETS AND ADHERE TO THE TOP OF THE SLAB. REMOVE FORM BOARD. CONTINUE WALL TO TOP OF STRUCTURAL SLAB WATERPROOFING AS SHOWN.