



FOR ANY BOLT PENETRATIONS WHERE THE WATERPROOFING SHEETS ARE NOT TIGHT TO THE CIRCUMFERENCE OF THE BOLT, THE FOLLOWING STEPS WILL BE USED TO MAKE A TIGHT SEAL.

THESE STEPS SHALL PRECEED THE INSTALLATION OF THE BUTYL TAPE AROUND THE BOLTS.

FLASHING OR FIELD  
WATERPROOFING SHEETS

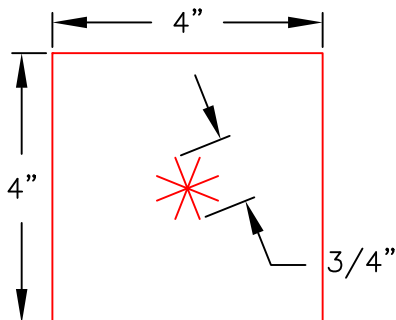


STEP #1 - CUT TWO PIECES OF WATERPROOFING SHEET 4" X 4". CUT A STAR IN THE CENTER OF EACH PIECE.

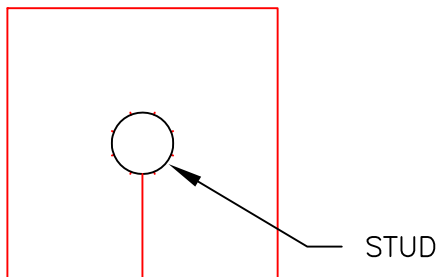

STEP #2 - APPLY ADHESIVE AROUND THE BASE OF THE BOLT AND 1" UP THE THREADS.

STEP #3 - PLACE THE PIECE OF WATERPROOFING SHEET OVER THE BOLT AND INTO THE ADHESIVE. TOP COAT WITH ADHESIVE.

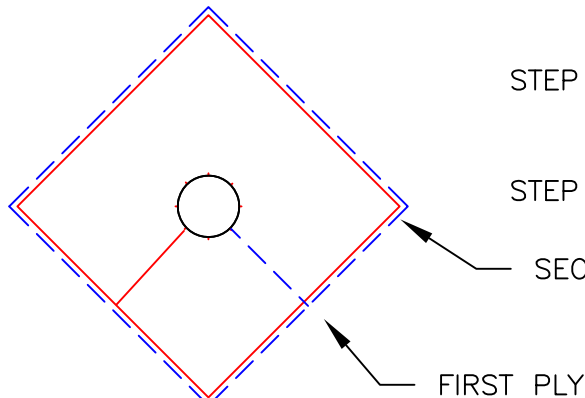

STEP #4 - PLACE THE SECOND CUT PIECE OVER THE BOLT AND INTO THE ADHISIVE, THEN TOP COAT.

STEP #5 - PLACE THE BUTYL SEALANT TAPE AS SHOWN IN DETAIL 105.

