


FLASHINGS

 FIRST PLY—SHEET
AND ADHESIVE

OVERLAP BOX CUTS

STEP #1 — INSTALLATION OF FIRST PLY

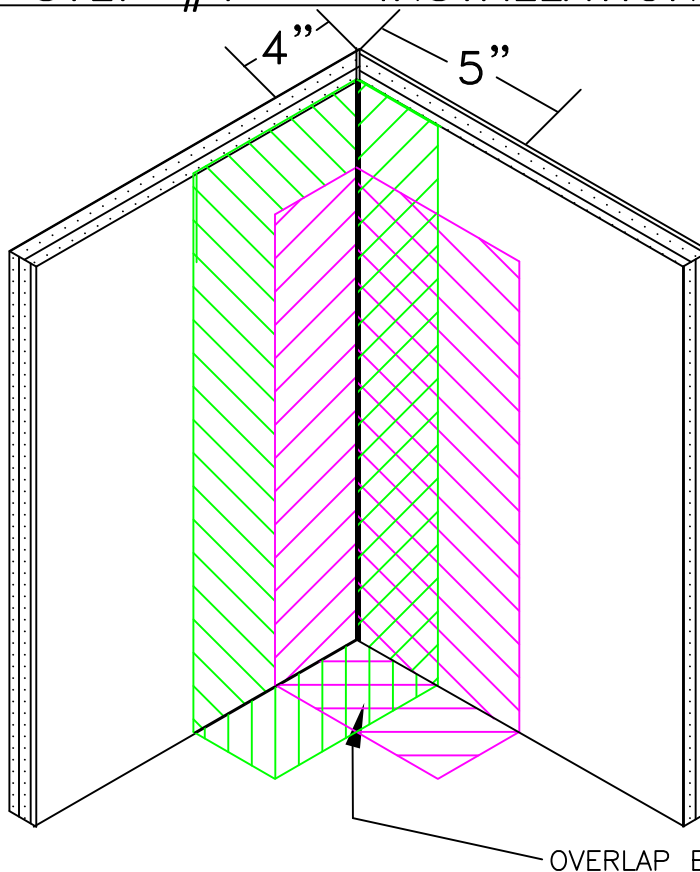

NOTE: All corner flashing
sheets are to be installed
to the height of design.

STEP #2 INSTALLATION OF 2ND PLY

 SECOND PLY—SHEET
AND ADHESIVE

OVERLAP BOX CUTS