


FLASHINGS

 FIRST PLY-SHEET
AND ADHESIVE

 SECOND PLY-SHEET
AND ADHESIVE

OVERLAP BOX CUTS

STEP #1 – INSTALLATION OF FIRST TWO PLIES

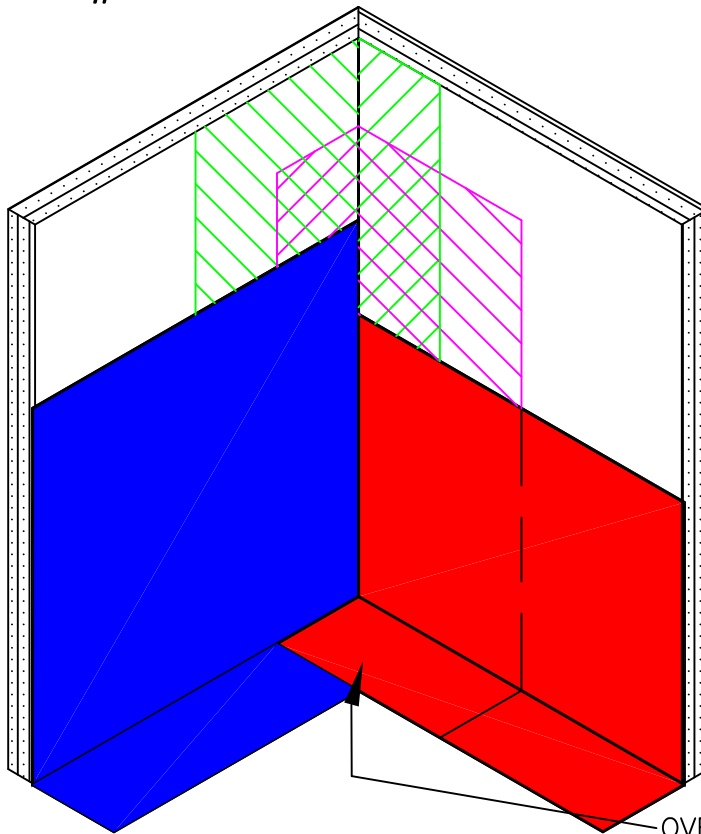

NOTE: All corner flashing
sheets are to be installed
to the height of design.

STEP #2 FIELD SHEETS

 THIRD PLY FIELD SHEET

 FOURTH PLY FIELD SHEET

OVERLAP BOX CUTS