


STEP #1 — APPLY POLYETHYLENE FILM, WATERPROOFING AND PROTECTION COURSE AS SHOWN.

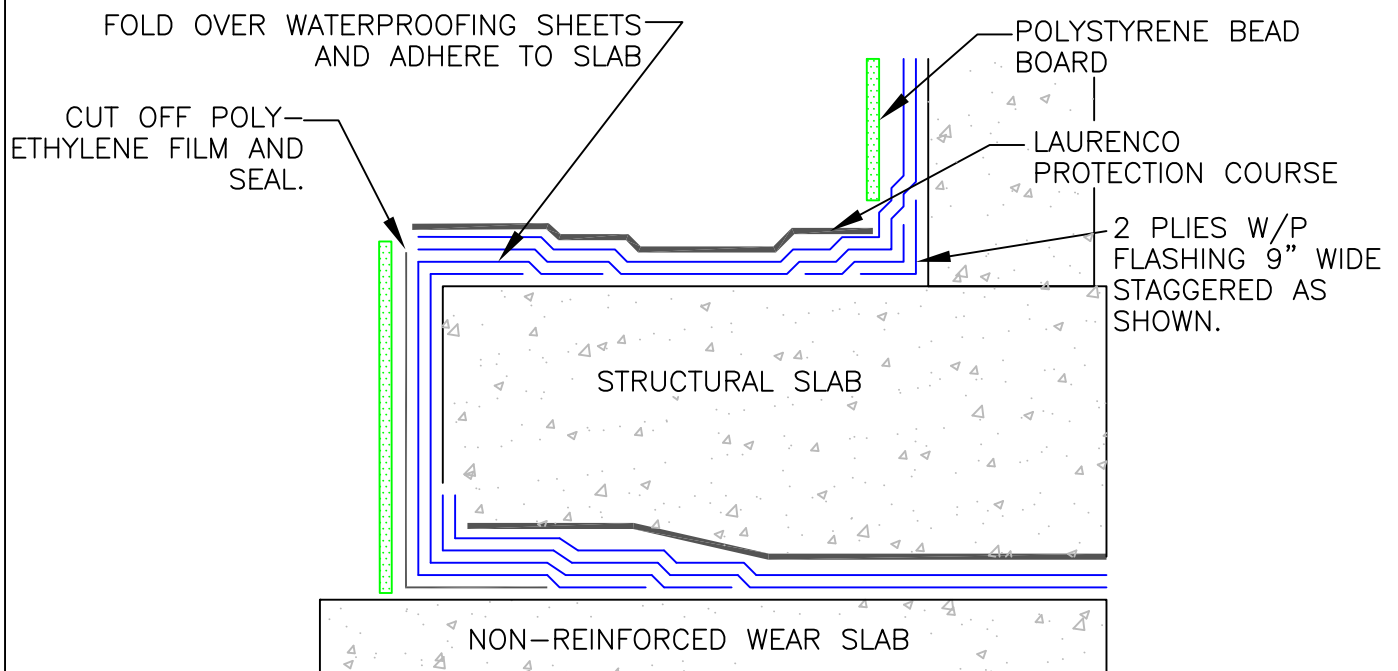

STEP#2 — PLACE SLAB THEN FOLD OVER WATERPROOFING SHEETS AND ADHERE TO THE TOP OF THE SLAB. REMOVE FORM BOARD. CONTINUE WALL TO TOP OF STRUCTURAL SLAB WATERPROOFING AS SHOWN.