




NOTE: LAURENCO PMMA LIQUID FLASHING MEMBRANE MAY BE UTILIZED IN LIEU OF FIELD WRAPPING WATERPROOFING SHEETS.

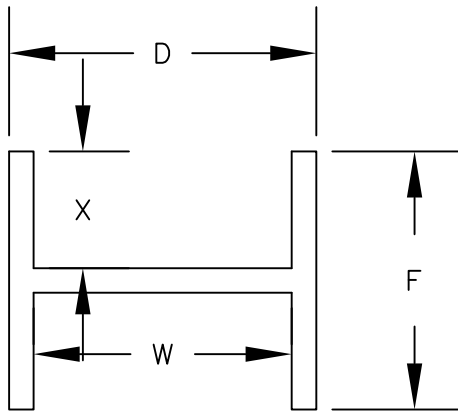

STEP #1 - MEASURE STEEL DIMENSIONS

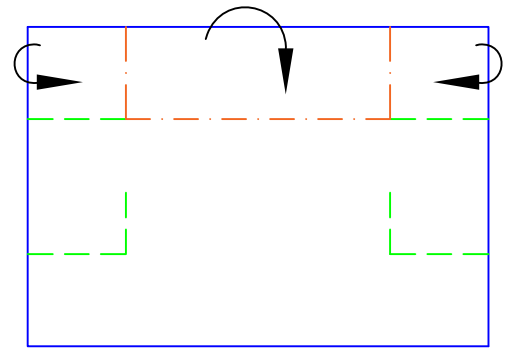


STEP #4 - FOLD ALONG THE BLUE LINES

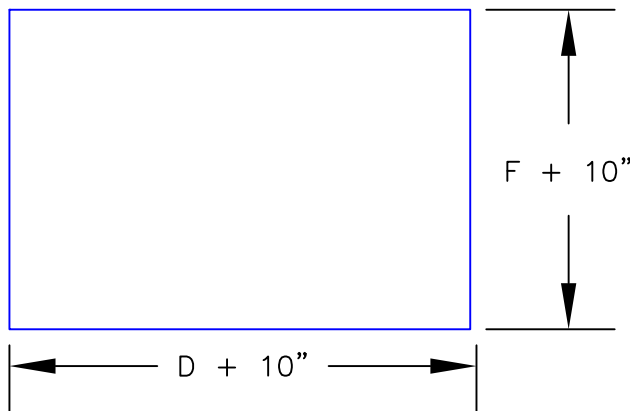

STEP #2 - CUT LAURENCO WATERPROOFING SHEET TO SIZE - DO THIS 4X.




STEP #5 - FOLD AGAIN ALONG THE BLUE LINES

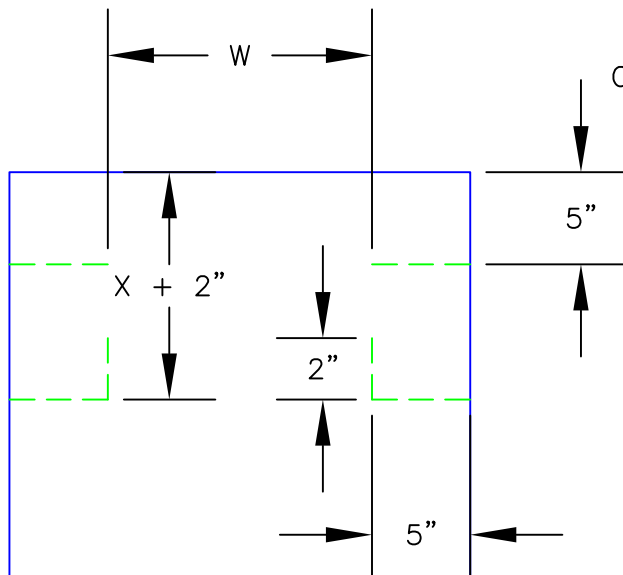

STEP #3 - CUT ALONG THE GREEN LINES TO THE PROPER DIMENSIONS SHOWN. DO THIS 4X.

COAT THESE EARS WITH ADHESIVE

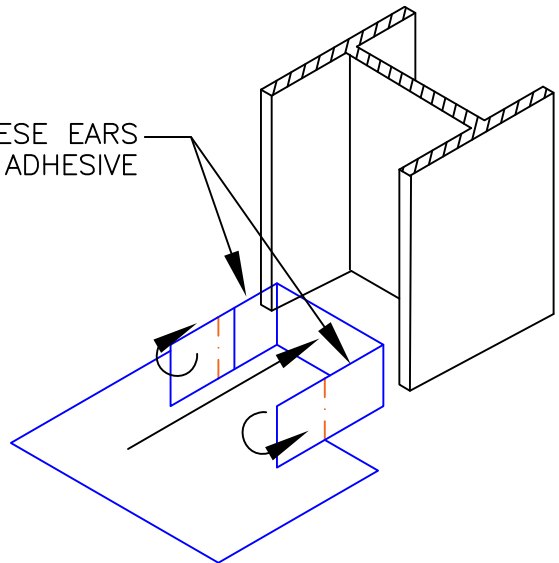

STEP #6 - COAT H-COLUMN WITH ADHESIVE 6" HIGH. COAT THE HORIZONTAL WITH ADHESIVE. INSERT THE SHEET AS SHOWN. FOLD ALONG BLUE LINES AROUND THE FLANGE OF THE COLUMN. TOP COAT WITH THE ADHESIVE. REPEAT ON OTHER SIDE; TWO PLIES.