



STEP 1: CUT A PIECE OF W/P SHEET THAT WILL BE LONG ENOUGH TO SURROUND THE PIPE WITH A 2" MIN. OVERLAP AND 9" WIDE. DO THIS 2X.

STEP 2: CUT THE PIG-EARS OUT BY FOLLOWING THE BLUE LINES; CUTS ARE APPROX. 2" WIDE (WIDER FOR LARGER DIAMETER PIPES).  
FOLD 4" AND 5" ALONG THE GREEN LINE. FOLD 5" AND 4" ON THE SECOND PLY. SEE PLACEMENT PATTERN ON DETAIL 3.

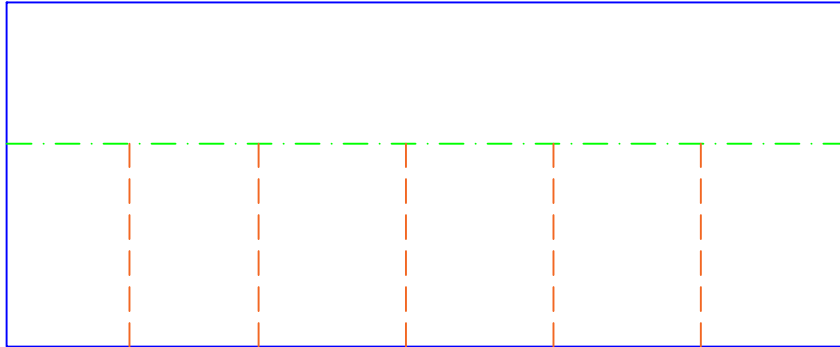

STEP 3: APPLY ADHESIVE TO THE BOTTOM OF THE PIPE UP 5" AND ON TO THE SURFACE 5".

STEP 4: SET INTO THE ADHESIVE THE FIRST PLY OF FLASHING 4" UP THE PIPE AND 5" ON TO THE SURFACE. TOP COAT AND REPEAT ON SECOND PLY 5" UP THE PIPE AND 4" ON TO THE SURFACE. STAGGER THE PIG-EARS FOR FULL COVERAGE.

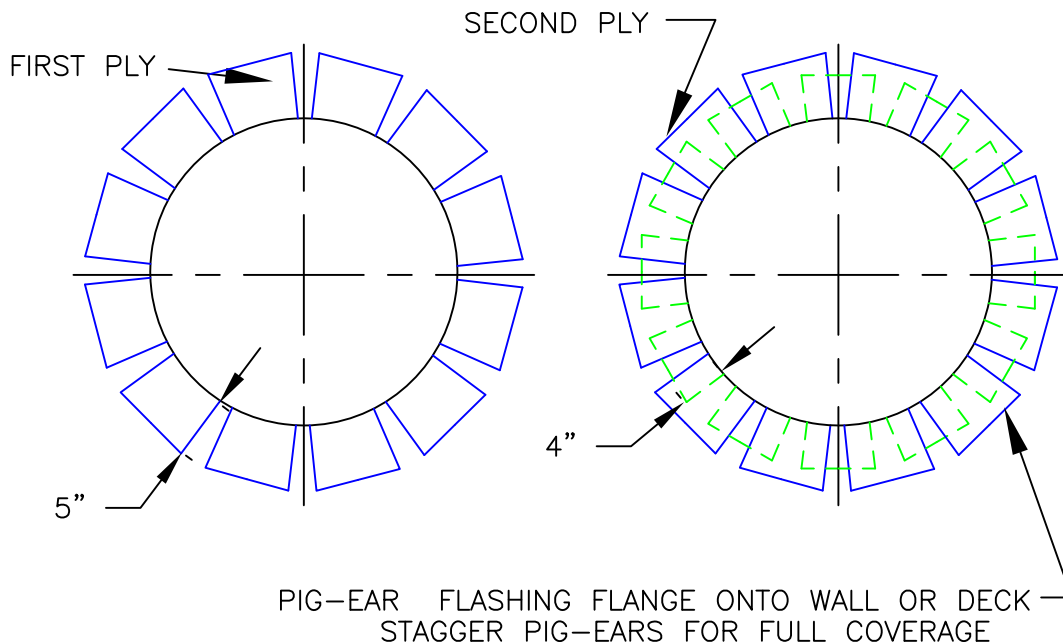

### DETAIL 1 FLASHINGS

NOTE: LAURENCO PMMA LIQUID FLASHING  
MAY BE UTILIZED IN LIEU OF  
MEMBRANE FLASHING.