


APPLICATION OF FIELD SHEETS

STEP 15: PLACE THE MAIN FIELD WATERPROOFING SHEET(S) UP TO THE PENETRATION. MAKE SURE TO KEEP A MINIMUM OF 4" ON ALL LAPS. LIGHTLY TOP COAT THE FLASHING AREA.

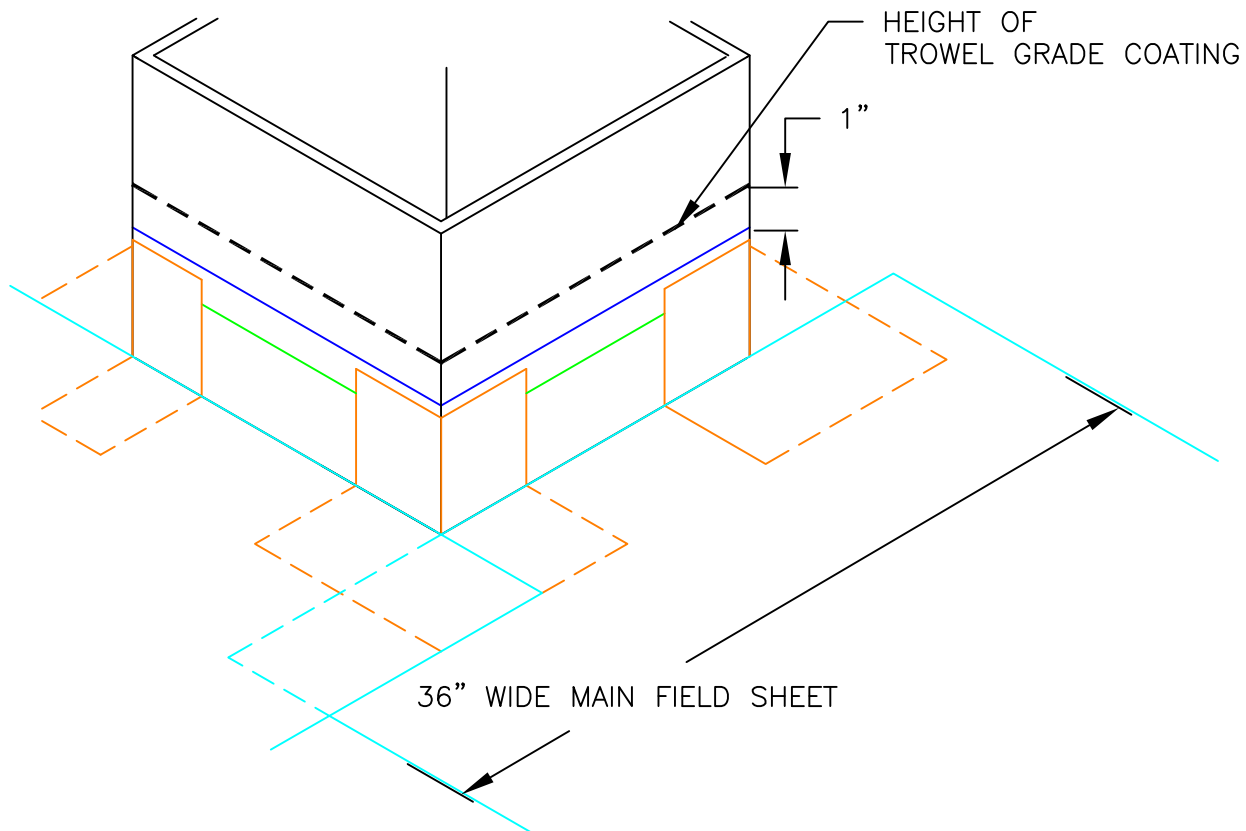

NOTE 1: DO NOT ROUND CORNERS. DO NOT "BRIDGE" CORNERS. ALWAYS FIT MATERIAL TIGHTLY.

NOTE 2: LAURENCO PMMA LIQUID FLASHING MAY BE UTILIZED IN LIEU OF MEMBRANE FLASHING.