


THE FOLLOWING PAGES CONTAIN A FLASHING DETAIL FOR RECTANGULAR PENETRATIONS OF A SIZE FOOTPRINT GREATER THAN 7 SQ. FT.. THIS DETAIL MAY ALSO BE USED FOR EXTERIOR CORNERS AT A HORIZONTAL DECK. RECTANGULAR PENETRATIONS OF A SMALLER SIZE SUCH AS 4"X4" STEEL TUBING OR PIPING MAY USE DETAILS 547 – 549.

## PRECUTTING THE BOX CUT FLASHING SHEETS

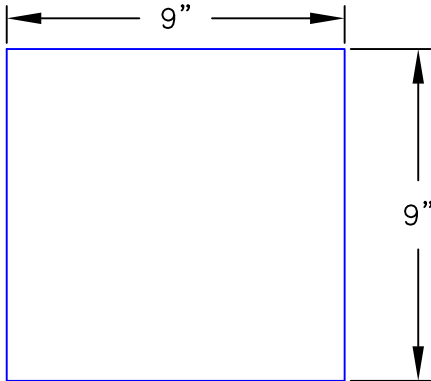

STEP 1: CUT 3 PIECES OF WATERPROOFING SHEET 9" X 9". FOR THE FOUR CORNERS OF THE RECTANGULAR PENETRATION.

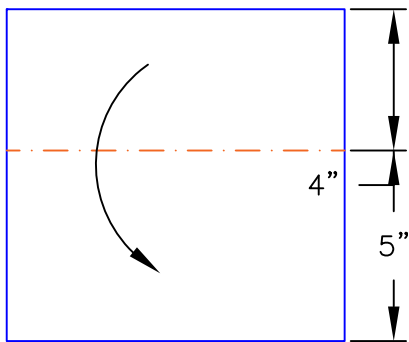


FIG. 2.1

STEP 2: TAKE 8 SHEETS (TWO FOR EACH CORNER) AND FOLD THEM MAKING ONE SIDE 4" AND ONE SIDE 5", AS SHOWN IN FIG. 2.1. CREASE THE SHEET AND RETURN IT TO ITS ORIGINAL STATE.

NOW FOLD THE OPPOSITE SIDE OF THE SHEET IN HALF AND CREASE, AS SHOWN IN FIG. 2.2.

RETURN THE SHEET TO ITS ORIGINAL STATE.

NOW SEPARATE THE SHEETS INTO TWO GROUPS OF FOUR.

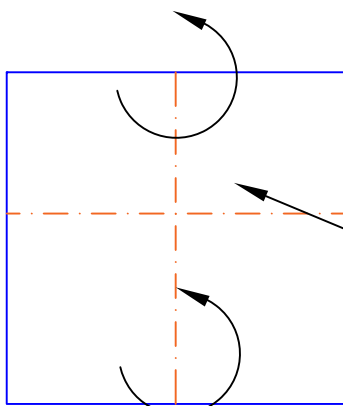


FIG. 2.2

FOLD IN HALF

NOTE: LAURENCO PMMA LIQUID FLASHING MAY BE UTILIZED IN LIEU OF MEMBRANE FLASHING.