


FIRST PART/SECOND PLY

NOTE 1: DO NOT ROUND CORNERS. DO NOT

"BRIDGE" CORNERS. ALWAYS FIT MATERIAL TIGHTLY.

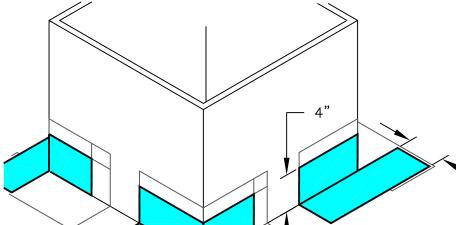

STEP 10: PLACE THE SECOND

PART/SECOND PLY ONTO THE CORNER OPPOSITE OF THE FIRST PART/SECOND PLY.
PLACE THE 4" SIDE UP THE VERTICAL AND THE 5" SIDE OUT ONTO THE HORIZONTAL AS SHOWN IN FIG. 10.1.
PRESS FIRMLY INTO PLACE. TOP COAT LIGHTLY WITH ADHESIVE.

PLY IN FIRMLY. TOP COAT

FIRST PART/SECOND PLY

- 5"

SECOND PART/ SECOND PLY

FIG. 10.1

NOTE 2: LAURENCO PMMA LIQUID FLASHING MAY BE UTILIZED IN LIEU OF MEMBRANE FLASHING.

LAURENCO WATERPROOFING TM ©
A DIVISION OF FBC CHEMICAL CORPORATION
Drawn by Autocad: BY JON LAWRENCE 01/01/15

NOT TO SCALE

544