
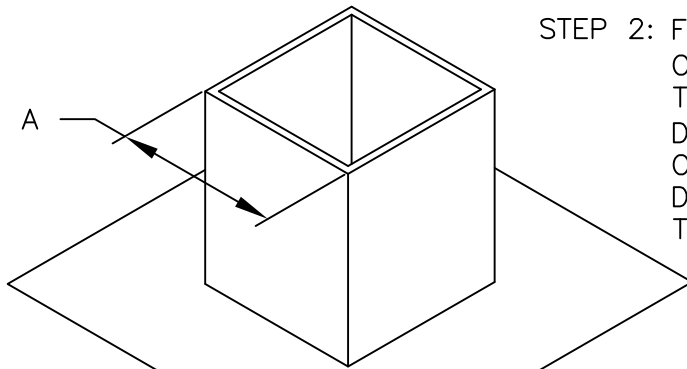


THE STEPS ON THE FOLLOWING PAGES ARE FLASHING INSTRUCTIONS FOR RECTANGULAR PENETRATIONS SMALLER THAN 7 SQ. FT.. RECTANGULAR PENETRATION OF A LARGER SIZE SHOULD USE FLASHING DETAIL 540 – 546.

PRECUTTING THE FLASHING SHEETS

STEP 1: CUT 2 PEICES OF W/P SHEET THAT WILL BE LONG ENOUGH TO GO AROUND THE SQUARE PIPE AND OVERLAP A MIN. OF 2". THESE PIECES SHOULD BE 9" WIDE.

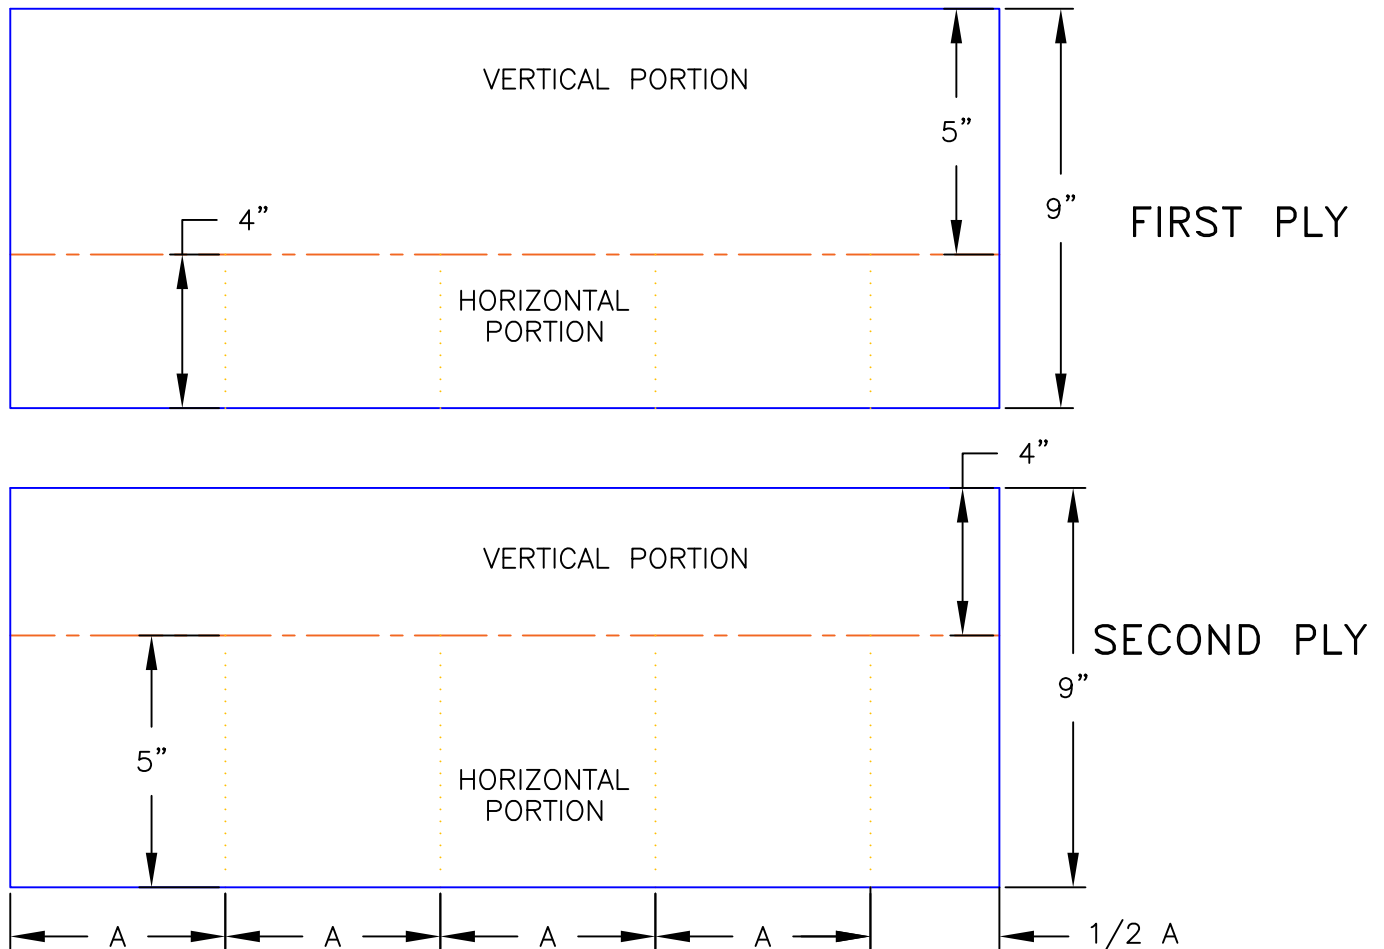

STEP 2: FOLD ONE PIECE OF SHEET ALONG THE ORANGE FOLD LINE 4" AND 5". THEN FOLD THE OTHER SHEET THE OPPOSITE DIMENSIONS 5" AND 4". CUT THE LEGS OF THE FLASHING OUT BY FOLLOWING THE DOTTED LINES. MAKE THEM AS WIDE AS THE SIDES OF THE RECTANGULAR PIPE.

NOTE: LAURENCO PMMA LIQUID FLASHING MAY BE UTILIZED IN LIEU OF MEMBRANE FLASHING.