



STEP 3: COAT THE RECTANGULAR PENETRATION WITH ADHESIVE 6" UP THE VERTICAL & 6" OUT ONTO THE HORIZONTAL IF APPLICABLE.

SEE DETAIL 24 STEP 13 FOR CUTTING THE TARGET PATCH. FOR SMALLER PENETRATIONS USE A 4"X4" SIZE INSTEAD OF A 9"X9". PLACE A TARGET PATCH ON EACH CORNER. PRESS FIRMLY INTO PLACE. TOP COAT LIGHTLY WITH ADHESIVE.

FIRST PLY
TARGET PATCH - 1ST PLY

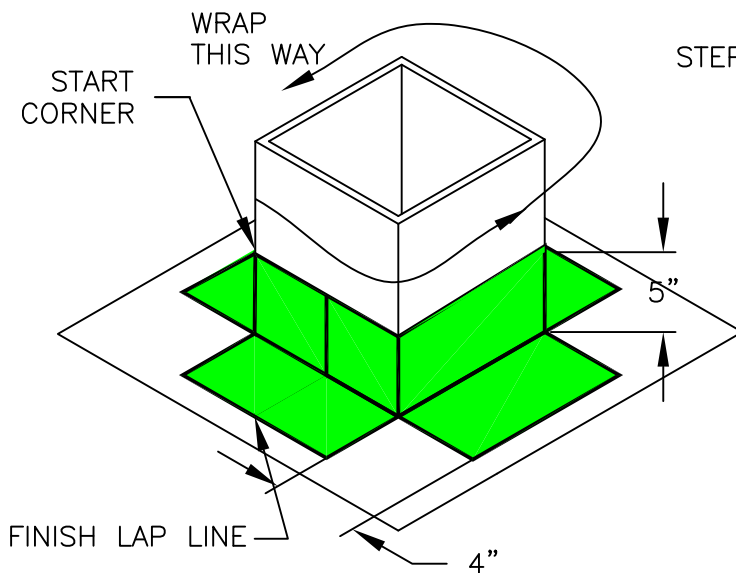

STEP 4: TAKE THE FIRST PLY OF FLASHING. MAKE SURE THE 4" SIDE IS ON THE VERTICAL. STARTING FLUSH AT A CORNER WRAP THE SHEET AROUND THE PENETRATION. MAKE SURE THE WRAP GOES COMPLETELY AROUND AND OVER LAPS ITSELF. PRESS THE FLASHING FIRMLY INTO PLACE. COAT THE LAP AREA LIGHTLY WITH ADHESIVE. COAT THE ENTIRE FIRST PLY LIGHTLY WITH ADHESIVE.

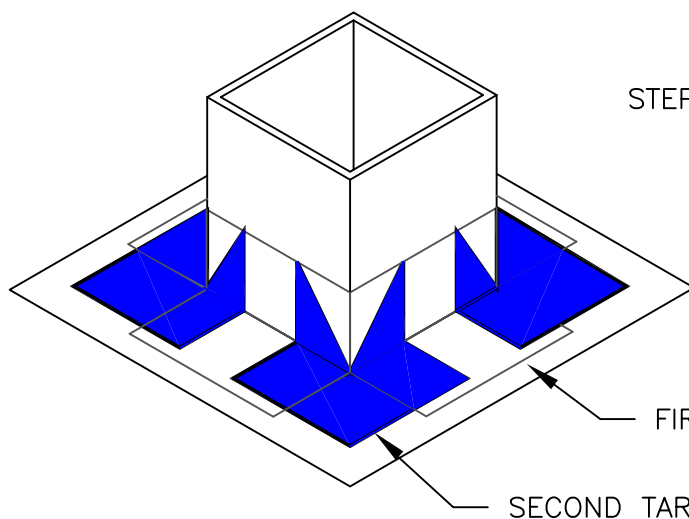

STEP 5: PLACE THE SAME SIZE TARGET PATCH FROM STEP 3 ONTO EACH CORNER. PRESS FIRMLY INTO PLACE. TOP COAT LIGHTLY WITH ADHESIVE.

NOTE: LAURENCO PMMA LIQUID FLASHING MAY BE UTILIZED IN LIEU OF MEMBRANE FLASHING.