


STEP 6: TAKE THE SECOND PLY OF FLASHING. PLACE THE 5" SIDE ON THE VERTICAL. START AT A DIFFERENT CORNER THAN THE FIRST PLY OF FLASHING AND WRAP AS YOU DID IN STEP 3. COAT THE LAP WITH ADHESIVE. PRESS THE FLASHING FIRMLY INTO PLACE. COAT THE ENTIRE FLASHING LIGHTLY WITH ADHESIVE.

NOTE: LAURENCO PMMA LIQUID FLASHING MAY BE UTILIZED IN LIEU OF MEMBRANE FLASHING.

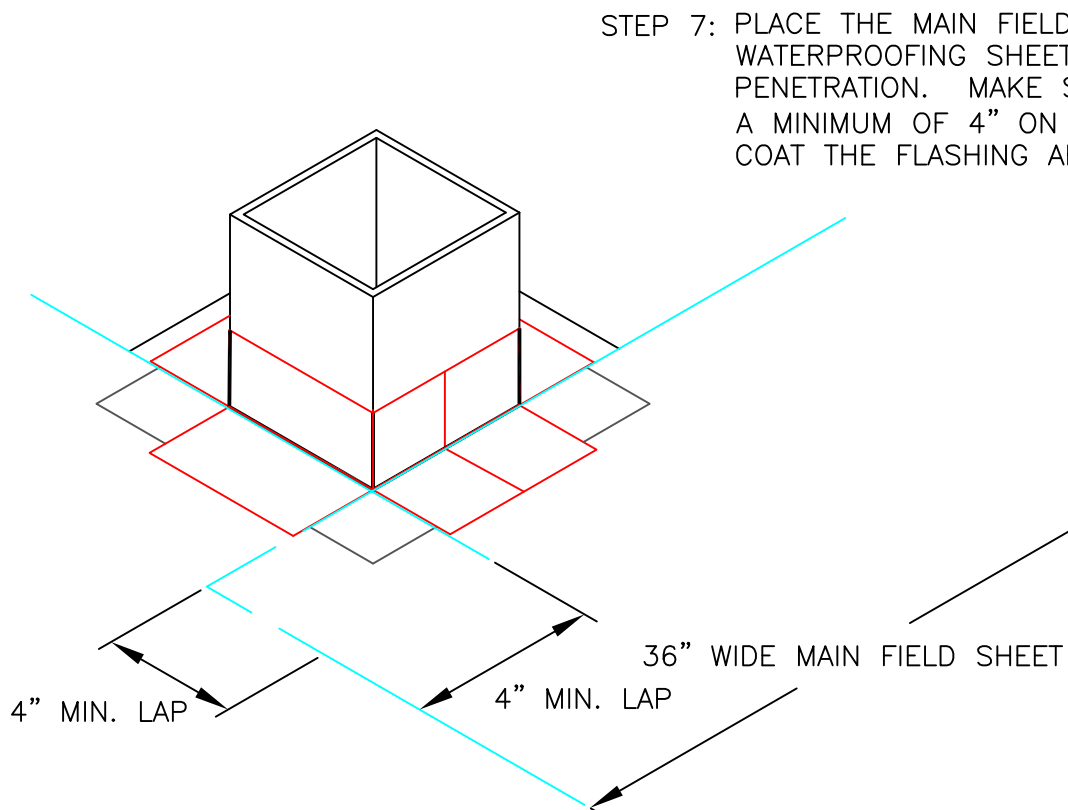

STEP 7: PLACE THE MAIN FIELD WATERPROOFING SHEETS UP TO THE PENETRATION. MAKE SURE TO KEEP A MINIMUM OF 4" ON ALL LAPS. TOP COAT THE FLASHING AREA.