


## STEP 1 OF 6


FOLLOW WRITTEN INSTRUCTIONS ON THE INSTALLATION OF THE LAURENCO PROTECTION COURSE. BE SURE TO TIGHTLY FIT THE LPC AROUND THE NELSON STUDS. FOLLOW THE WRITTEN INSTRUCTIONS ON INSTALLATION OF THE FIRST PLY OF LAURENCO SHEET. WHEN GOING OVER A NELSON STUD GROUP CUT TWO VERTICAL SLOTS BETWEEN THE STUDS IN THE FIRST LAURENCO SHEET PLY TO ALLOW THE TWO PAIRS OF STUDS TO PASS THROUGH SNUGLY. DO NOT OVER CUT.

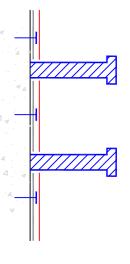

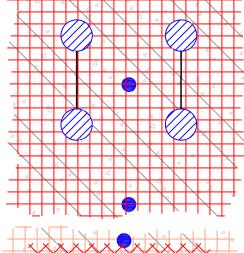

STEP 2 OF 6
FOLLOW WRITTEN INSTRUCTIONS ON
THE INSTALLATION THE PATCH PLY.
BE SURE TO TIGHTLY FIT THE FIRST
PATCH PLY AROUND THE NELSON
STUDS. CUT FOUR HORIZONTAL SLOTS
IN THE FIRST PATCH PLY AS SHOWN
FROM THE CENTER OF THE NELSON
STUDS TO THE SIDES OF THE PATCH.
FIRMLY RUB PATCH INTO PLACE. DO
NOT OVER CUT.

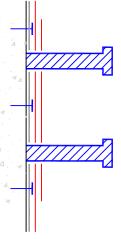


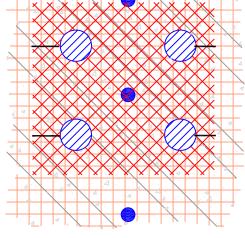


WAIT 24 HOURS BEFORE PROCEEDING WITH STEP #3

## STEP 3 OF 6

FOLLOW THE WRITTEN INSTRUCTIONS
ON INSTALLATION OF THE SECOND PLY
OF LAURENCO SHEET. WHEN GOING
OVER A NELSON STUD GROUP CUT
TWO HORIZONTAL SLOTS BETWEEN THE
STUDS IN THE SECOND LAURENCO
SHEET PLY TO ALLOW THE TWO PAIRS
OF STUDS TO PASS THROUGH SNUGLY.
DO NOT OVER CUT.

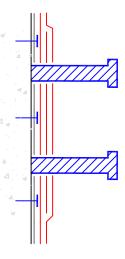

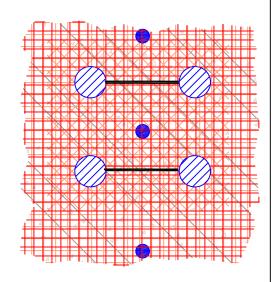



6009 - 1